


CORDLESS CELLULAR SHADE INSTALLATION INSTRUCTION

Number of parts included for each shade:


Shade width	Brackets	Screws	Handle	Handle for TDBU
18" ~ 47.9"	2	4	1	2
48" ~ 72.9"	3	6	2	4
73" ~ 84"	4	8	2	4

* 2-on-1 will double the quantity of handles.


* 3-on-1 will triple the quantity of handles.

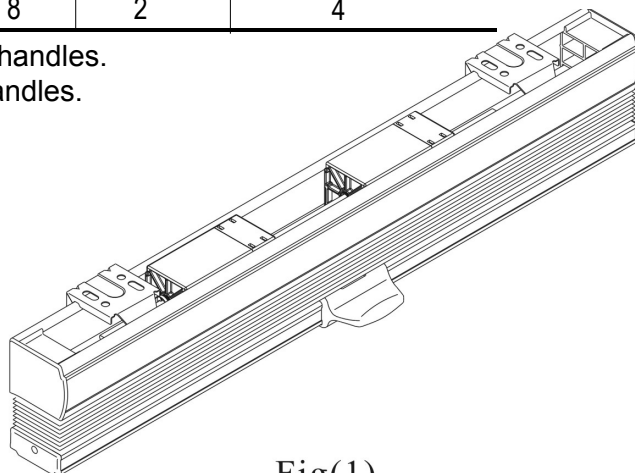


Fig(1)

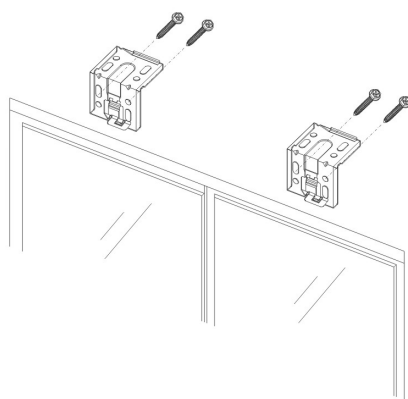

Outside mount Fig(2-1)

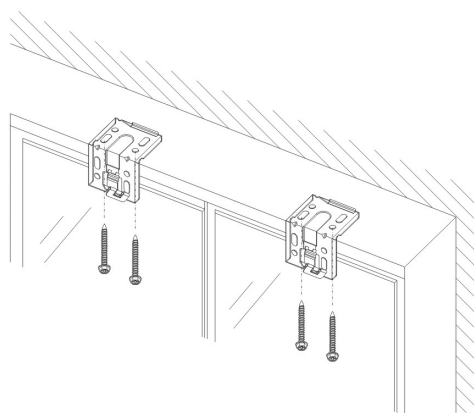

Fig(2-2) Inside mount

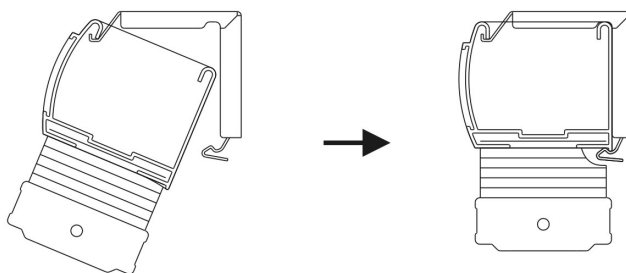

Fig(3)

Please allow 24 hours for your shade to drop to its actual height when first installed due to the nature of the fabric.